



Take out the screws



Remove the bottom frame



Take out the screws





Take out the pickguard




The Borsi pickup can be installed here




The Borsi pickup can be installed with the factory Yamaha screws




Three rounds to the left on the screw

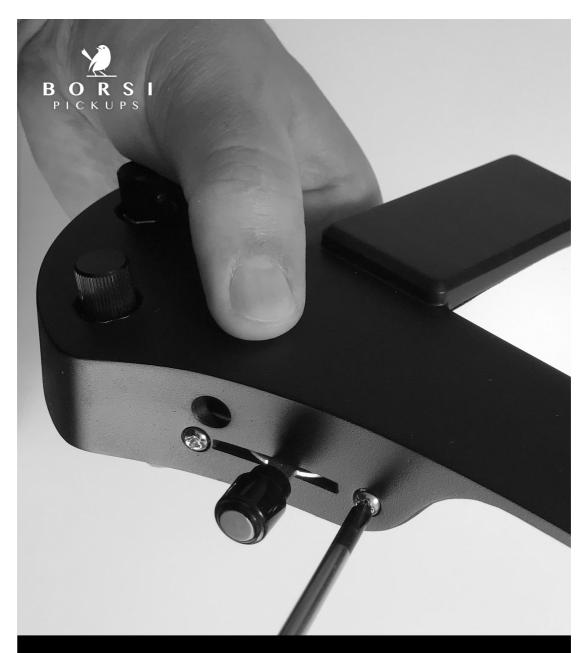

Three rounds to the left on the screw

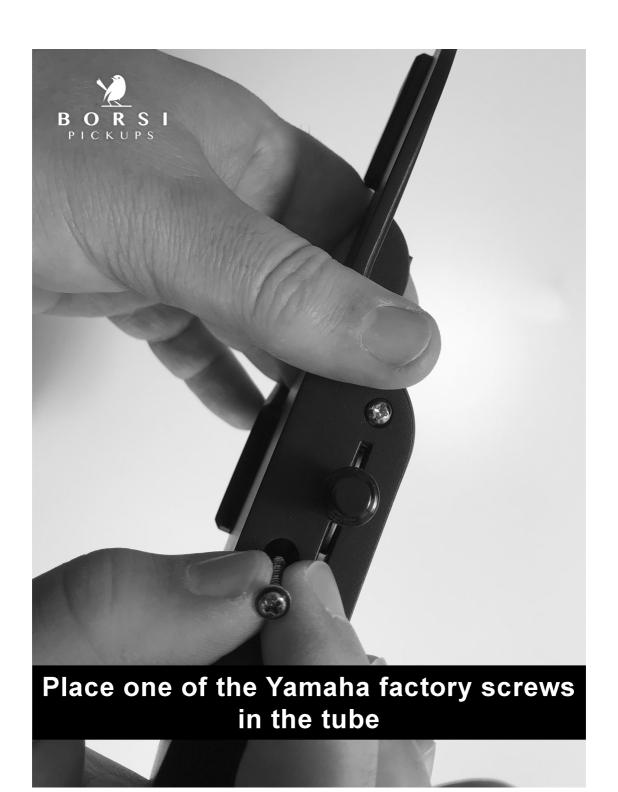





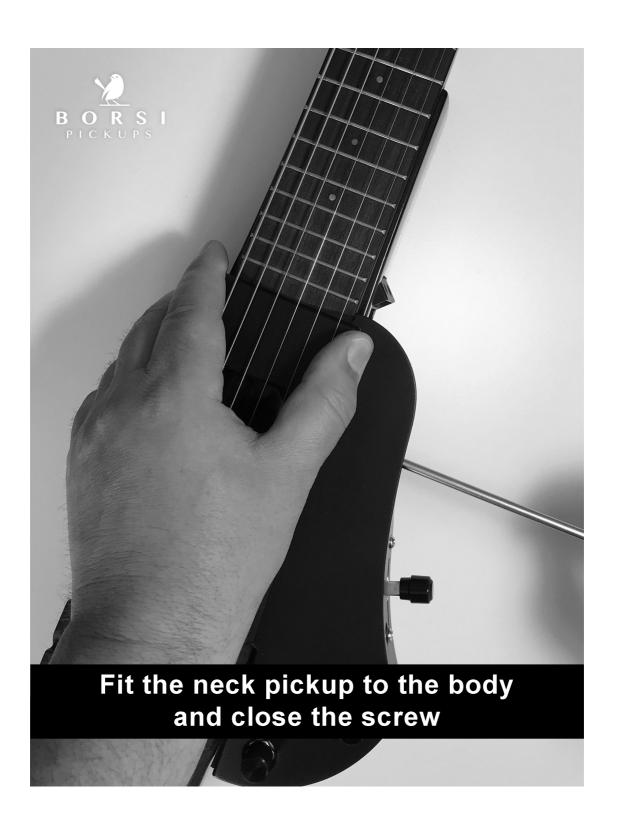




Tighten the screw next to the bridge

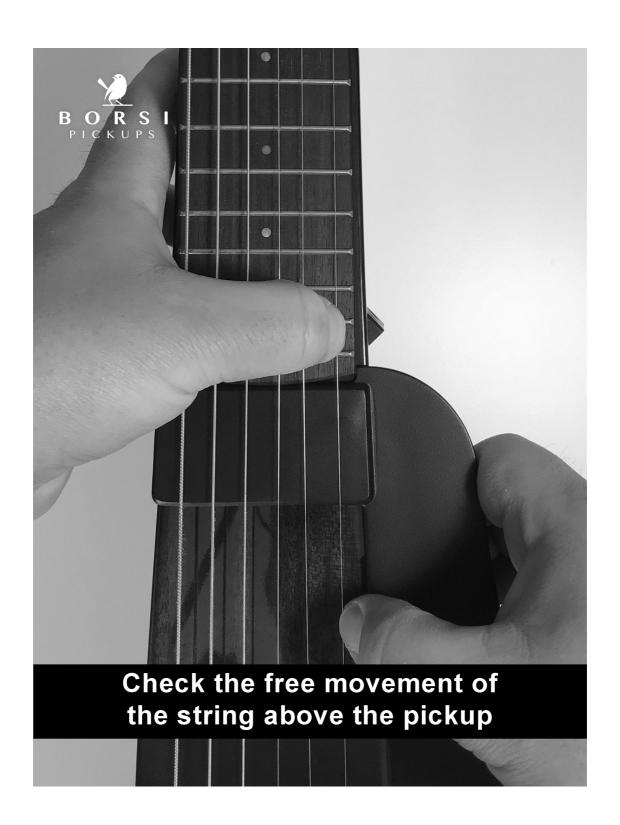

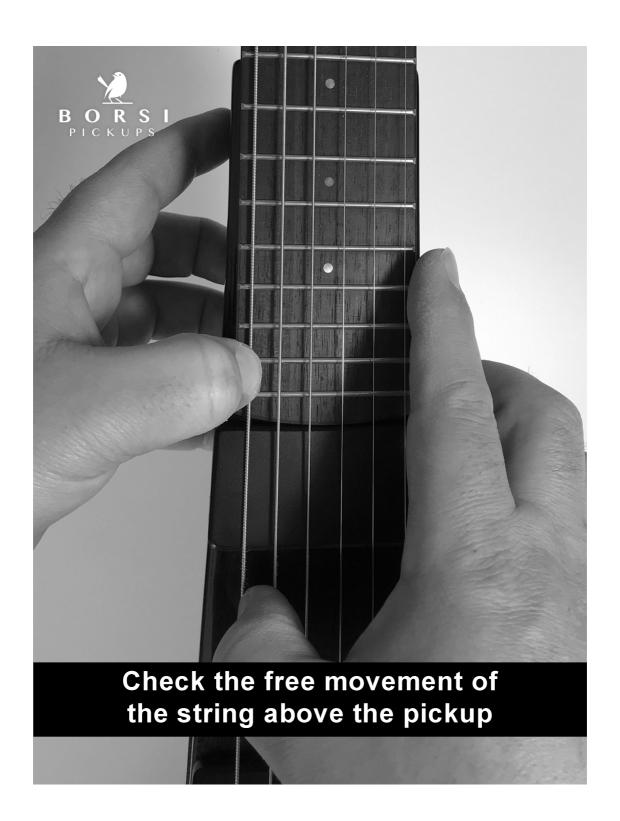

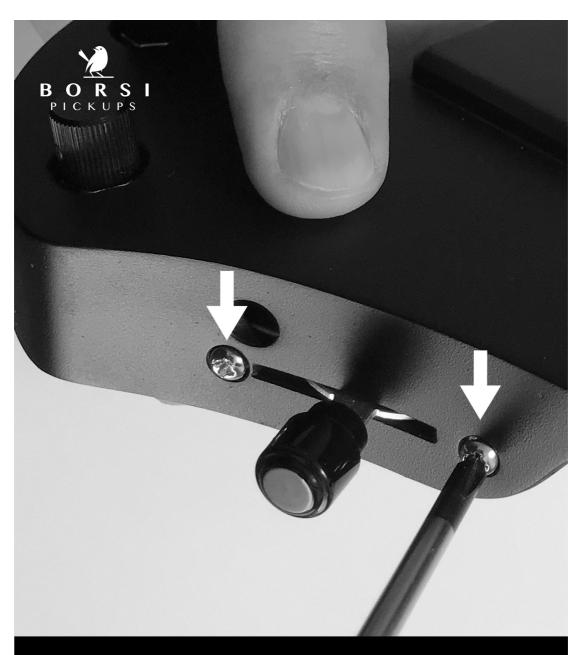

Tighten the screws



Ready...